

LVLP Spray Gun

Model No.: R500

AEROPRO
ENGINEERED FOR PROFESSIONALS



Read this Instruction Manual carefully and understand it completely, basic precaution should be strictly followed to prevent the damage to the tool and injury to the operator. Retain this manual for further reference. And you should pay more attention to the Technical Data.



CONTAIN:

- ◆ Description
- ◆ Technical Data
- ◆ Important Safety Instruction
- ◆ Instructions for Operation
- ◆ Maintenance/Storing
- ◆ Troubleshooting/Repairs
- ◆ Parts List

Description


Low volume low pressure technology applies paint with less force, meaning less "bounce" of the surface into the air, Stainless steel needle and nozzle to accommodate a variety of coatings, Just the paint gun for covering small areas and touch-up work. New ergonomic designed handled for comfortable grip.

Technical Data


Type of Feed	Gravity
Air inlet	1/4"
Standard Dia of Nozzle:	1.5mm
Optional Dia of Nozzle:	1.3-2.0mm
Recommended air pressure:	2.0-3.5bar (28.8 – 51psi)
Max. pressure of air :	6.8 bar (100psi)
Paint Capacity:600cc
Avg. Air Consumption:	84.1 – 109l/min (3.5-3.9cfm)
Patten width:	180-280mm (7.0"-10.9")
Weight	0.35kgs (0.77 lbs)

Important Safety Instructions

1. For toxic vapors produced by spraying certain materials can create intoxication and serious damage to health. Always wear safety glasses, gloves and respirator to prevent the toxic vapor hazard, solvent and pointing paint coming into contact your eyes or skin. (see fig 1)

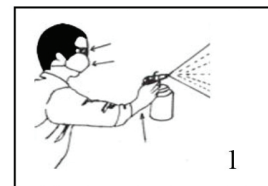

2. Never use oxygen, combustibile or any other bottle gas as a power source or would cause explosion and serious personal injury. (see fig 2)

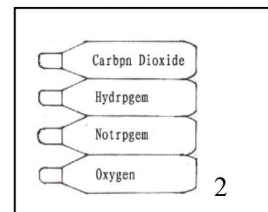


3.Fluid and solvent can be highly flammable or combustibile. Use in well-ventilated spray booth and avoid any ignition sources, such as smoking, open flames and decrial hazard. (see fig 3)



4.Disconnect tool from air supply hose before doing tool maintenance and during non-operation, for emerge stop and prevention of unintended operation, a ball valve near the gun to air supply is recommend.

5.Use clean, dry and regulate compressed air rated at 2.0~3.5bar, never exceed maximum permissive operating pressure (see fig 4)

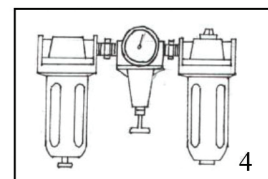

6.Never use homogenate hydrocarbon solvent, which can chemically react with aluminum and zinc parts and chemically compatible with aluminum and zinc pats.

7. Never point gun at you and others at any time.
8. Before operating the tool, make sure all the screws & caps are securely tightened in case of leaking;
9. Before painting, make inspection for free movement of trigger and nozzle to insure tool can operate well.
10. Never modify this tool for any applications. Only use parts, nozzles and accessories recommended and accessories recommended by manufactures.
11. notes to the effect that the equipment should be only be used in a well ventilated area.

◆ Instructions For Operation

Preparation

1. After unpacking the product, inspect carefully for any damage that may have occurred during transit. Make sure to tighten fittings, bolts, etc., before putting unit into service.
2. Thoroughly mix and thin paint in accordance with the paint manufacturer's instructions. Most materials will spray readily if thinned properly.
3. Strain material through filter, cheese cloth or a paint strainer.
4. Fill the canister about $\frac{3}{4}$ full and start the air compressor.

WARNING *DO NOT EXCEED Spray Gun or any other parts in the compressor system MAXIMUM PRESSURE.*

5. After Connect the gun to air supply, please make sure that the fluid cap, container and air hose have been connected tightly with spray gun.
6. Set up a piece of cardboard or other scrap material to use as a target and adjust for best spray pattern.

WARNING *Never aim or spray at yourself or anybody else which would cause serious injury.*

7. Test the consistency of the material by making a few strokes on a cardboard target. If material still appears too thick, add a small amount of thinner. THIN WITH CARE! Do not exceed paint manufacturer's thinning recommendations.

Adjustment

The desired pattern, volume of fluid output and fine atomization can easily be obtained by regulating the Pattern Adjusting Knob, Fluid Adjusting Knob and Air Adjusting Knob.

PATTERN ADJUSTMENT: Turning Pattern Adjusting Knob to the right until tight will make spray pattern round, or turning left make spray pattern ellipse.

Material (PAINT) ADJUSTMENT: Turn the Paint Adjusting Knob clockwise will decrease the volume of fluid output and counter-clockwise will increase fluid output.

AIR Inlet ADJUSTMENT: Turning the Air Adjusting valve clockwise will decrease the air volume.


And counter-clockwise will increase the air volume.

Operation

1. Begin spraying. Always keep the gun at right angles to the work .
2. Keep the nozzle about 6 to 12 inches from the work surface. Grip the gun keeping perpendicular with spraying area then move it parallel for several times, Stopping gun movement in mid-stroke will cause a build up of paint and result in runs. Do not fan the gun from side to side while painting. This will cause a build-up of paint in the center of the stroke and an insufficient coating at each end.
3. Trigger the gun properly. Start the gun moving at the beginning of the stroke **BEFORE SQUEEZING THE TRIGGER** and release the trigger **BEFORE STOPPING GUN MOVEMENT** at the end of the stroke. This procedure will blend each stroke with the next without showing overlap or unevenness .
4. The amount of paint being applied can be varied by the speed of the stroke, distance from the surface and adjustment of the fluid control knob.
5. Overlap strokes just enough to obtain an even coat.

NOTE: Two thin coats of paint will yield better results and have less chance of runs than one heavy layer.

6. Use a piece of cardboard as a shield to catch overspray at the edges of the work to protect other surfaces.

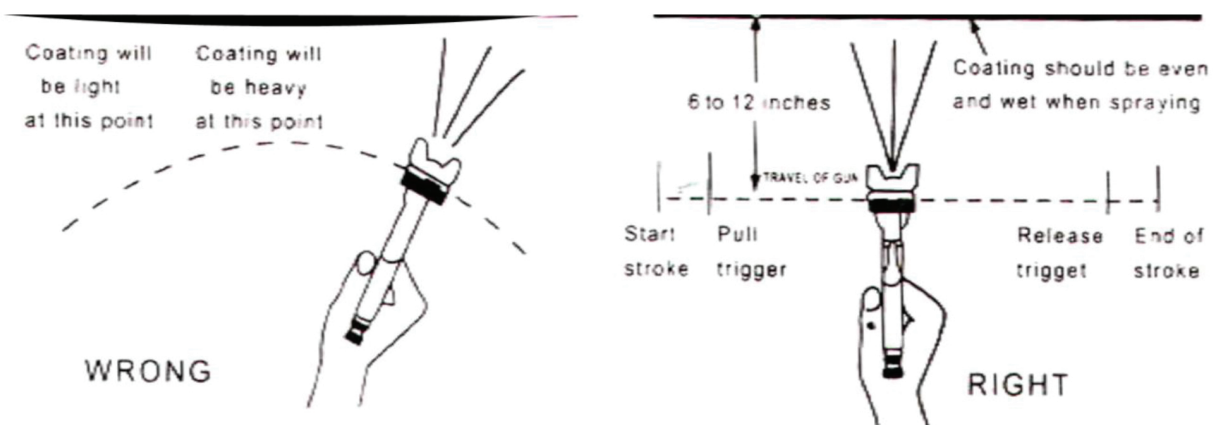

◆ Maintenance

Incomplete cleaning could cause function failures and a degradation of the fan form.

1. Remove any remaining paint by pouring it into another container.
2. Disassemble the spray gun making sure to remove the needle before disassembling the nozzle to avoid damage to the housing of the nozzle closure.
3. Clean all the paint passages and the nozzle. Clean the other components using a brush soaked in solvent.
4. Reassemble the spray gun and spray a small quantity of solvent to eliminate all the residues in the paint passages.



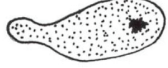
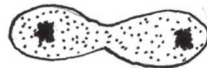
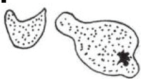
WARNING:

NEVER USE METAL OR OTHER OBJECTS THAT COULD DAMAGE THE HOLES IN THE NOZZLE AND CAP. NEVER IMMERSE THE SPRAY GUN COMPLETELY IN SOLVENT. NEVER USE COMPONENTS OR PARTS THAT ARE NOT MANUFACTURER ORIGINALS.


Storing

- When not using spray gun, turn the fluid adjustment knob counter-clockwise to open which will reduce spring tension on needle fluid tip.
- Spray gun **MUST BE** well cleaned and lightly lubricated.

Trouble shooting

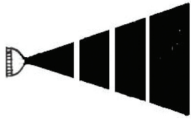Symptom	Problems	Solution
Fluttering or spitting 	<ol style="list-style-type: none"> 1. Material level too low. 2. Container tipped too far. 3. Loose fluid inlet connection. 4. Loose or damaged fluid tip/seat. 5. Dry or loose fluid needle packing nut. 6. Air vent clogged 	<ol style="list-style-type: none"> 1. Add material into container. 2. Hold more upright. 3. Tighten. 4. Adjust or replace. 5. Lubricate and or tighten. 6. Clear vent hole.
Pattern is arc. 	<ol style="list-style-type: none"> 1. Worn or loose Fluid nozzle. 2. Material build up on Air cap. 	<ol style="list-style-type: none"> 1. Tighten or replace Fluid nozzle. 2. Remove obstructions from holes, but don't use metal objects to clean it.
Pattern is not Evenly spread. 	<ol style="list-style-type: none"> 1. Material build up on Air cap. 2. Fluid nozzle dirty or worn. 	<ol style="list-style-type: none"> 1. Clean or replace Air cap. 2. Clean or replace Fluid nozzle.
The center of Pattern too narrow. 	<ol style="list-style-type: none"> 1. Material too thin or not enough. 2. Atomization air pressure too high. 	<ol style="list-style-type: none"> 1. Regulate material viscosity. 2. Reduce air pressure.
Pattern width of fan-sharp is not enough. 	<ol style="list-style-type: none"> 1. Material too thick. 2. Atomization air pressure too low. 	<ol style="list-style-type: none"> 1. Regulate material viscosity. 2. Increase air pressure.
Air leaking from air cap without pulling trigger	<ol style="list-style-type: none"> 1. Sticking air valve stem 2. Contaminate on air valve or seat 3. Worn or damaged air valve or seat 4. Broken air valve spring 5. Bent valve stem 	<ol style="list-style-type: none"> 1. Lubricate 2. Clean 3. Replace 4. Replace 5. Replace
Fluid leaking from packing nut	<ol style="list-style-type: none"> 1. Packing nut loose 2. Packing worn or dry 	<ol style="list-style-type: none"> 1. Tighten, but do not restrict needle 2. Replace or lubricate (non-silicone oil)
Excessive overspray	<ol style="list-style-type: none"> 1. Too high atomization pressure 2. Too far from work surface 3. Improper stroking (arcing, gun motion too fast) 	<ol style="list-style-type: none"> 1. Reduce pressure 2. Adjust to proper distance 3. Move at moderate pace, parallel to surface.
Will not spray	<ol style="list-style-type: none"> 1. No pressure at gun 2. Fluid control not open enough 3. Fluid too heavy 	<ol style="list-style-type: none"> 1. Check air lines 2. Open fluid control 3. Thin fluid or change to pressure feed system.

◆ Parts List

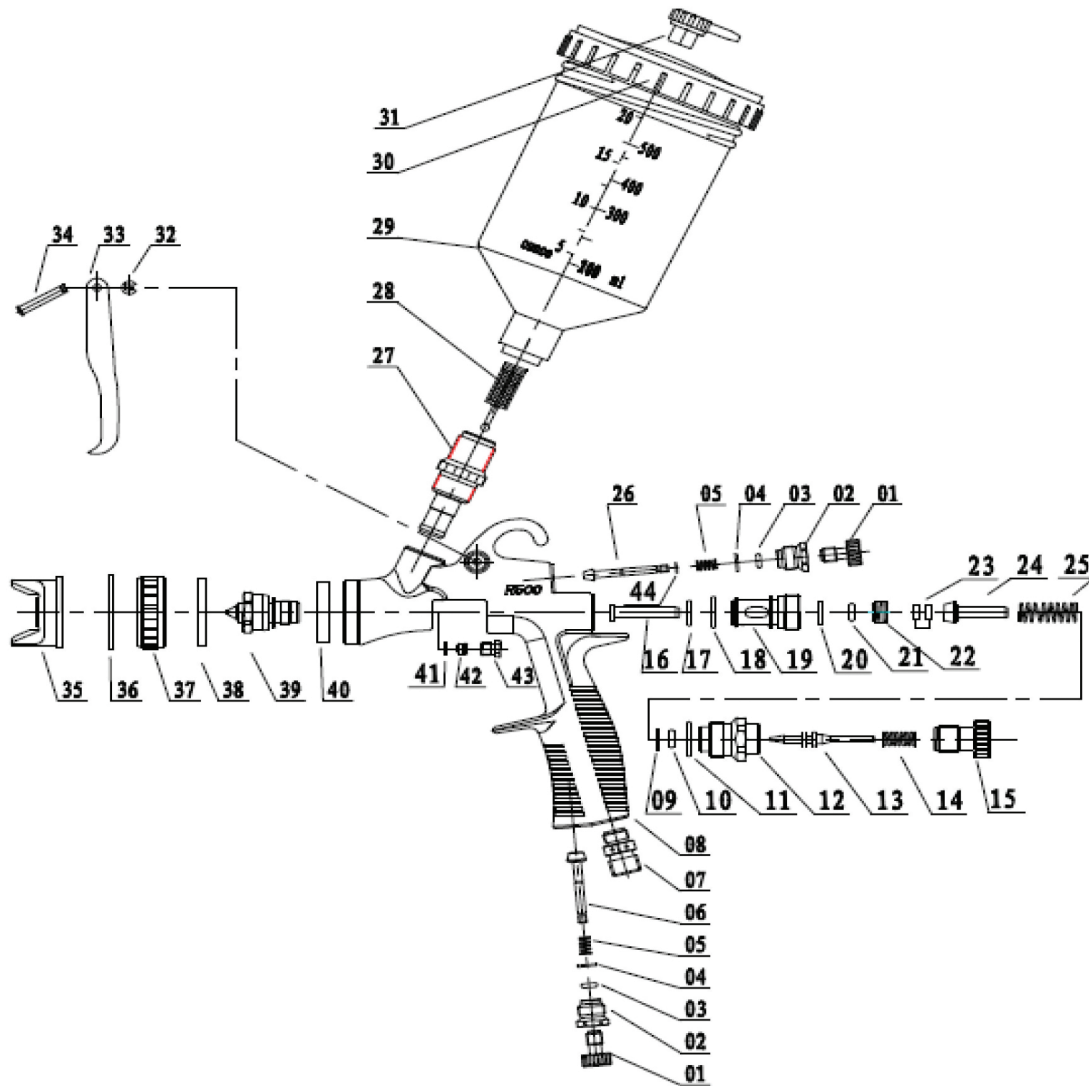

No	Description	No	Description	No	Description
1	Air Adj. Screw	16	Switch pole	31	Ventilator Head
2	Air Adj. Knob	17	O-ring (8.5*1.2)	32	Snap Retainer
3	O-ring 3.3X1.5	18	O-ring (10.7*1.8)	33	Trigger
4	Flat washer	19	Needle Housing	34	Trigger Lever
5	Air valve spring	20	Cover Washer	35	Atomization
6	Air Valve step	21	O-ring(4.5*1.2)	36	Fluid washer
7	Air Inlet Joint	22	Needle Housing screw	37	Round nut
8	Gun body	23	Foam Washer	38	Washer
9	Flat washer	24	Air Inlet Valve pole	39	Nozzle
10	O-ring (4.5*1.8)	25	Switch spring	40	Inner circle
11	O-ring (8.7*1.85)	26	Atomization needle	41	Nozzle foam washer
12	Fluid Adj. Knob	27	Paint Inlet Joint	42	Seal washer
13	Fluid Adj. Needle	28	Filter	43	Direction screw
14	Fluid Needle Spring	29	Container	44	Snap Retainer
15	Fluid Adj. screw	30	Container cover		